




FITTING INSTRUCTIONS

Part Number :- 501414
Part Description :- Ace Mounting
Fitting Location :- Right Mount

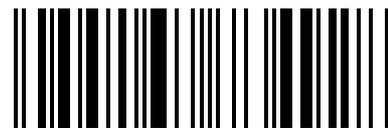

5055167734928

Make	Model	Bodystyle	From	To
Volkswagen	Amarok	2/4 Door Pick-up	10/2010	1/2017

Vehicle Details

Volkswagen Amarok 2/4 Door Pick-up 10/2010 - 1/2017

Instructions

1. Carefully pull and remove the O/S/F door seal, adjacent to the right "A" Pillar trim.
2. Using a trim removal tool carefully un-clip and removed the right "A" pillar trim.
3. Remove the Torx T20 screw located at the bottom of the lower right dashboard panel that holds the headlight adjuster switch and the light switch.
4. Pull the bottom of the trim panel towards you and then slide the panel downwards until the two locating pegs at the top are released, do not disconnect the cables just rest the trim against the dashboard.
5. Remove the backing protector from the double-sided tape pad provided and then attach the pad to the underside of the bracket close to the narrow hook.
6. Clean the top of the dashboard in between the right air-vent and the base of the "A" pillar trim using an alcohol wipe or similar and then allow to dry.
7. Use your hands to squeeze the narrow hook together at the end of the bracket by approx 2-3mm, until the hook fits tightly over the edge of the dashboard where it meets the bottom of the "A" pillar trim.
8. Once you are happy with the adjustment of the hook, remove the backing protector from the double-sided tape pad and then hook the top of the bracket over the edge of the dashboard and then pull the bracket towards you to make sure it sits tightly home before allowing the double-sided tape pad to adhere to the top of the dashboard.
9. Carefully stretch the bottom of the bracket over the bottom edge of the dashboard where the lower right trim panel was removed earlier, the bottom of the bracket should sit tight against the front of the dashboard.
10. Refit the lower right trim panel back into position and then secure using the Torx T20 screw removed earlier.
11. Ensure the double-sided tape pad has adhered correctly to the top of the dashboard and then refit the O/S/F "A" pillar trim and the door seal.



Care should always be taken by the installer when installing this product. Nemesis is not liable for any damage caused to a vehicle by incorrect installation, use, modifications or repair by any 3rd party or yourself.
Tel: 01905 720199 email: sales@nemesis.ltd web: www.nemesisb2b.com