




FITTING INSTRUCTIONS

Part Number :- 501432
Part Description :- Ace Mounting
Fitting Location :- Centre Vent

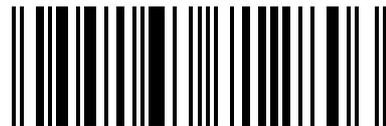

5055167712803

Make	Model	Bodystyle	From	To
Volkswagen	Transporter	Van	1/2003	12/2009

Vehicle Details

Volkswagen Transporter Van 1/2003 - 12/2009

Instructions

1. using the appropriate tools remove the storage bin on top of the dashboard.
2. locate the bracket and secure with the screw to the front right of where the bin was.
3. Use double sided tape to dampen any rattles between the bracket and the dashboard.
4. refit parts in reverse order

Care should always be taken by the installer when installing this product. Nemesis is not liable for any damage caused to a vehicle by incorrect installation, use, modifications or repair by any 3rd party or yourself.
Tel: 01905 720199 email: sales@nemesis.ltd web: www.nemesisb2b.com